

Installing the servo unit and interceptor front

- Verify the screw shaft nut is fitted correctly fitted to the connecting rod in the backplate when mounting the servo unit. Tighten screws with specified torque: **2 Nm (T25)**.
- Verify the interceptor blades are moving easily (blades shall be easily moved by hand.)
- Reinstall the front and tighten the screws with specified torque: **7 Nm (T30)** and **15 Nm (T40)**.
- Run the Interceptor Check and verify that the blades are moving freely within acceptable range (all the readings of Interceptor Check are in green zone). Document and archive the results for later reference.

