



Inställning av slagvinkel 45°, 60°, 80°, 110° och höger eller vänster själv-parkeringsläge.

(Motorn är inställd på 110° / högerparkerering vid leverans)

1. Tag bort skyddsplåten (4-skruv).
2. Tag bort stoppbrickan och lyft ut transmissionsarmen.
3. Skruva ur skruvarna som fäster hålskivan i snäckhjulet.
4. Lyft av hålskivan från snäckhjulet. Nu ser du de 2 avlånga spårn "R" och "L" i det vita snäckhjulet.
5. Placera hålskivan så att hålet som motsvarar din valda vinkel, sammanfaller med spår "R" eller "L".
"R" = höger självparkeringsläge.
"L" = vänster självparkeringsläge.
6. Återmontera hålskivan, transmissionsarmen och kåpan.

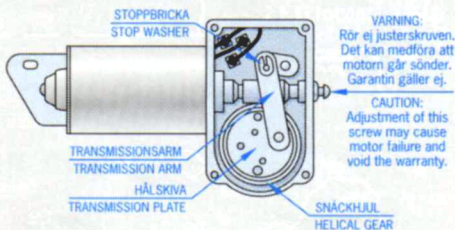

Monteringshål C-C = 158,7mm
Mounting holes C-C = 158.7mm

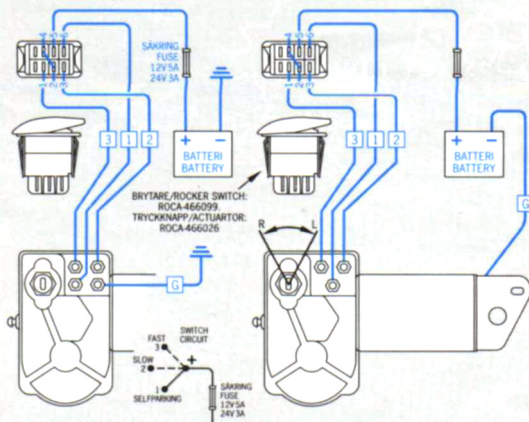

Standardinställning 110° / högerparkerering
Standard adjustment 110° / right self parking

To change sweep angle to 45°, 60°, 80°, 110° and adjust left or right self parking.

(The motor is set in 110° / right self parking)

1. Remove cover plate (4 screws).
2. Remove the stop washer and lift off the transmission arm.
3. Unscrew the 2 screws fastening the transmission plate.
4. Lift off the transmission plate from the white helical gear. You can see now the 2 grooves "R" and "L" on the helical gear.
5. Place the transmission plate with the hole for the desired angle to the groove "R" or "L".
"R" = right self parking. "L" = left self parking.
6. Remount the transmission plate, transmission arm and cover plate.

