


5. Mount the Interceptors

NOTE! Refer to the main Installation Guide for sealing, cabling and final mounting!

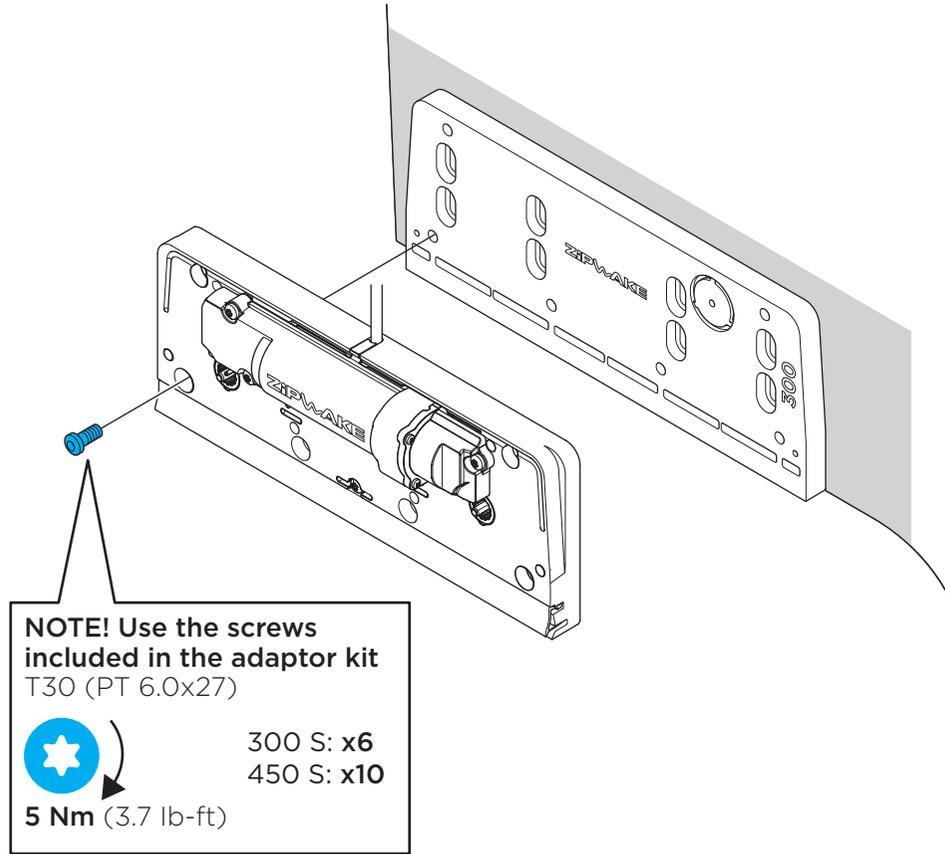

ZIPWAKE

www.zipwake.com

INSTALLATION GUIDE

ADAPTOR FOR BTS TO ZIPWAKE AND/OR HULLS WITH PROTRUDING BOTTOM PLATE



ZIPWAKE IT300-S & IT450-S

NOTE! Refer to the main Installation Guide when mounting!



1. Test to see how the adaptor fits on the transom

- NOTE!** Remove old sealant/dirt from the transom ensuring a smooth and clean surface for adaptor plate to mount to and to ensure a good seal with o-ring.
Max 2 mm (0.08") between parallel planes.

- Temporarily fit the interceptor back plate onto the adaptor. Use straight edges to determine the adaptor position and mark the top on the transom.

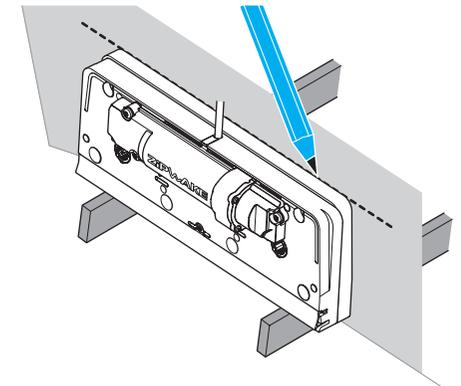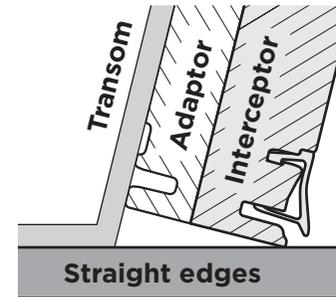

NOTE! Protruding hull:
Cut off the lower edge of the adaptor with a right-angle grinder if necessary!

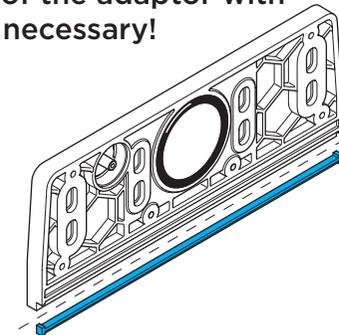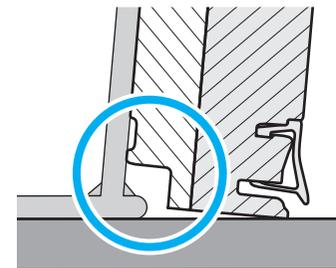


NOTE!

Max. 15 mm (0.59")

ZIPWAKE



2. Use the adaptor as a drill template

NOTE! For BTS replacement go straight to step 3!

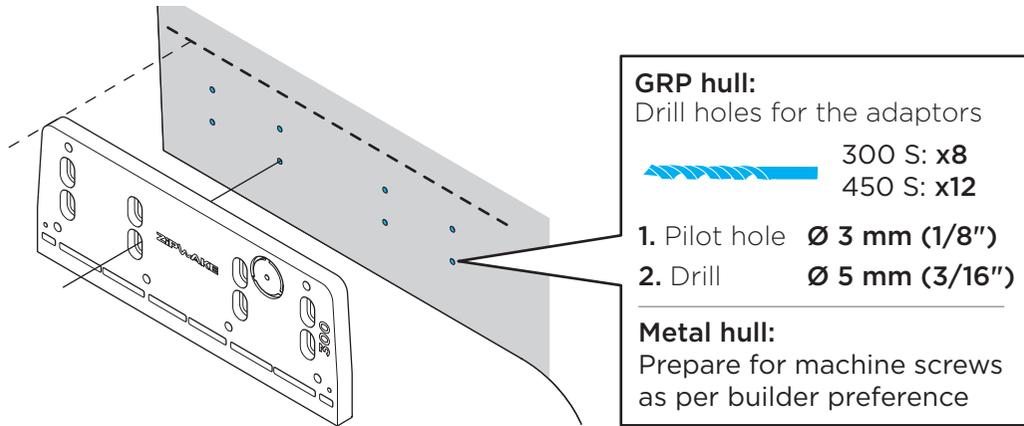

3. Prepare the transom for optional concealed thru-hull fitting

NOTE! For thru-hull fittings above the waterline go straight to step 4!

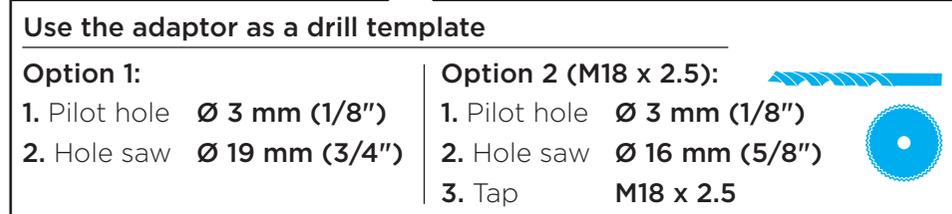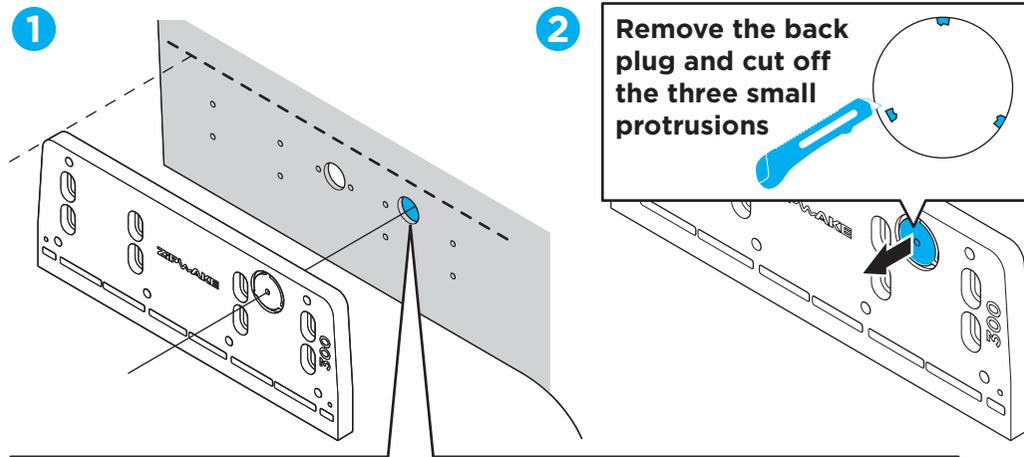

NOTE! Refer to the main Installation Guide on how to prepare the interceptor for concealed thru-hull fitting!

4. Mount the adaptor

