





BRUKER MANUAL / USERS MANUAL

NS 800 Office Standard/Comfort V-02

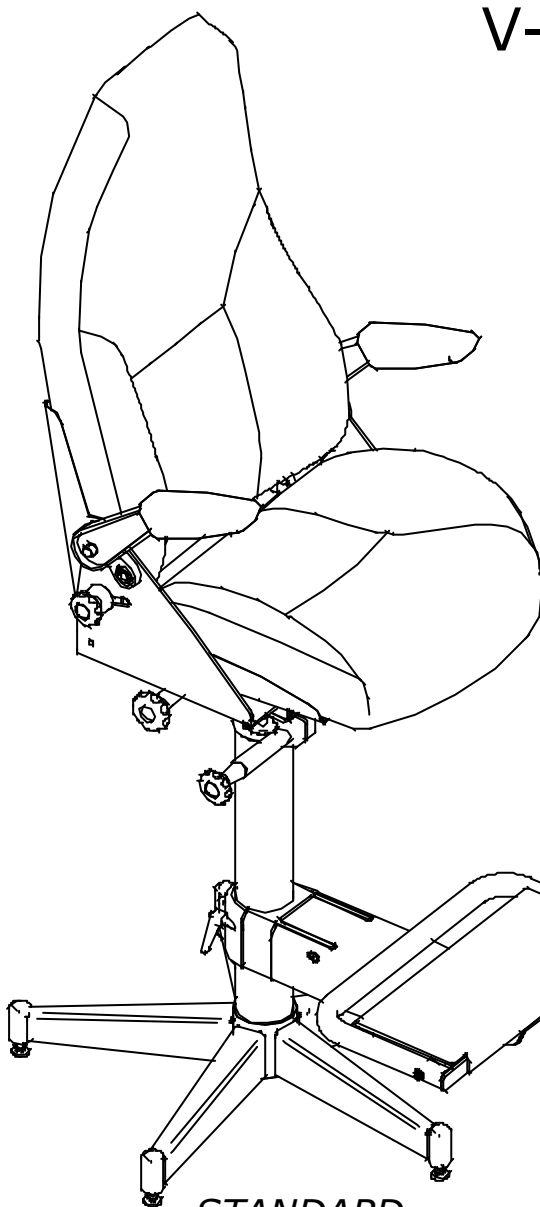

STANDARD
6140

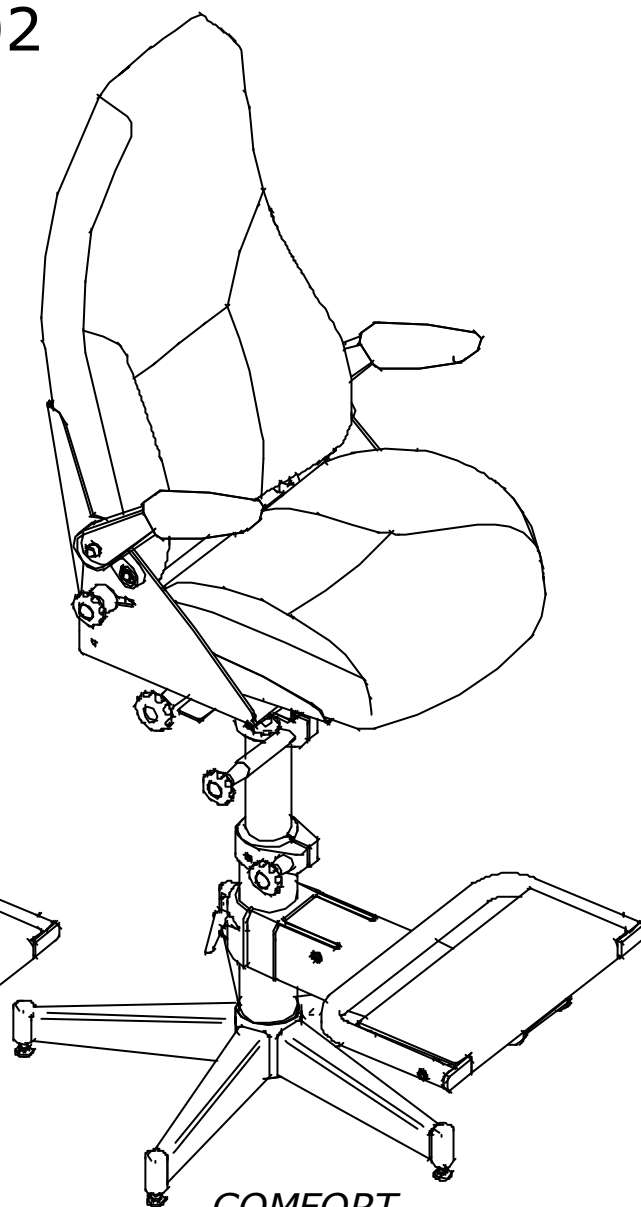


COMFORT
6130 h=720/890
6150 h=520/570

06.08.2002.



A/S SØRLANDETS ALUMINIUMPRODUKTER
Postboks 7005, 4674 Kristiansand NORWAY
Tlf. +47 38 18 52 00 Fax. +47 38 18 20 86
e-mail: sale@norsap.no
Internet: www.norsap.no

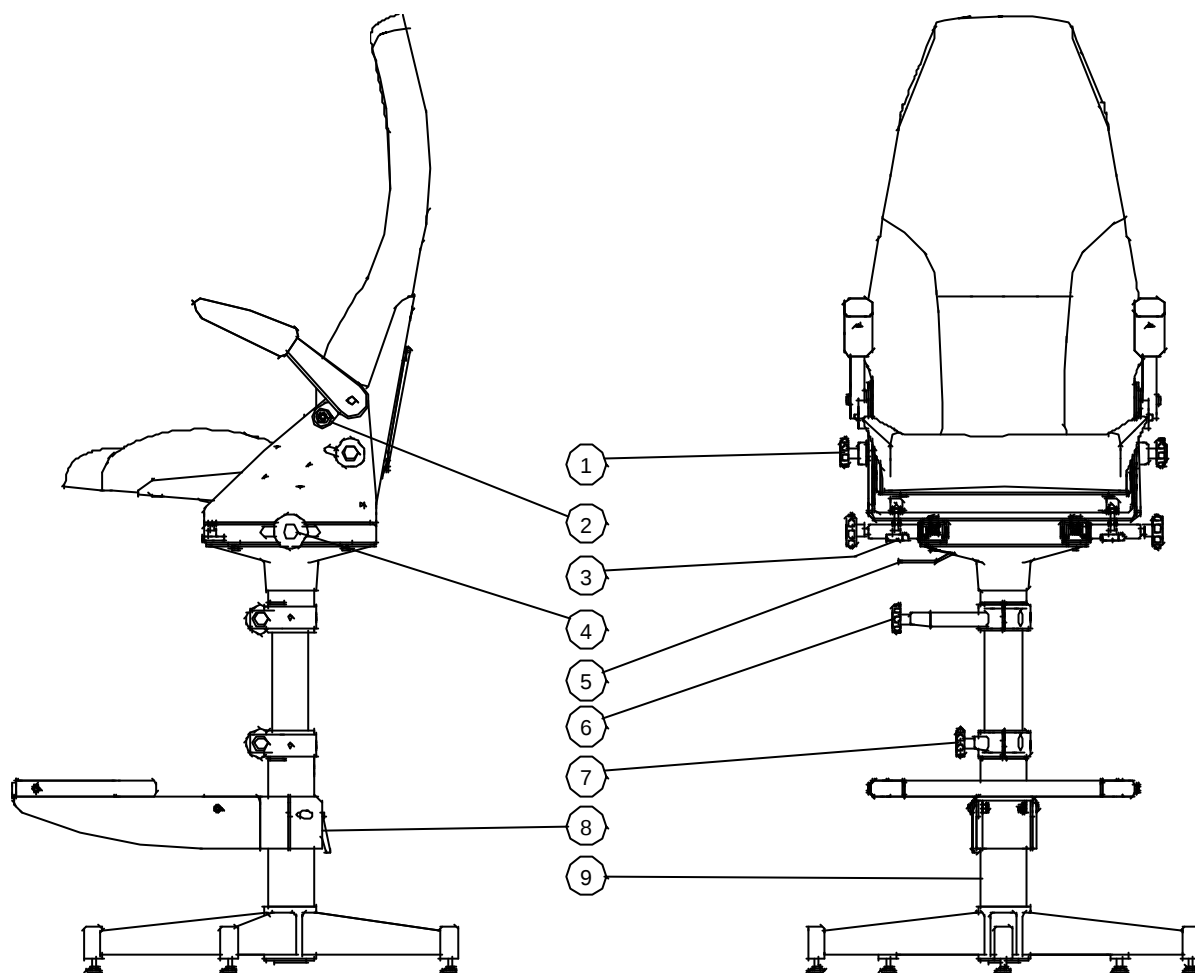

- ① HENDEL FOR JUSTERING AV RYGGVINKEL
- ② JUSTERING AV ARMHVILER
- ③ REGULERING AV SETEVINKEL
- ④ LÅSING AV TOPP GLIDESKINNE
- ⑤ UTLØSPAK FOR HØYDEREGULERING
(Inngår ikke i Standard modellen Art.No.6101)
- ⑥ FASTLÅSING AV SVING
- ⑦ STRAMMING AV TELESKOP (inngår ikke på
Standard modellen Art.Nr.6140)
- ⑧ FASTLÅSING AV FOTHVILER
- ⑨ TELESKOPSØYLE (Fast høyde på standard
søyle modell Art.Nr.6140)

Solid underlag er nødvendig for sikker montering. Under lagring eller transport hender det at teleskopsøyle ⑨ kan sette seg i nedre stilling. Det kan med letthet trekkes opp ved å skru til skruen av sving ⑥, løft opp utløserhendelen ⑤ samtidig at hele stolen trekkes opp.

Vekt/Weight: NS800 Office Standard, Art.No:6140 - 30kg.
NS800 Office, Art.No:6150 - 25kg.
NS800 Office Comfort, Art.No:6130 - 34kg.


- ① ADJUSTABLE HANDLE FOR THE BACK REST ANGLE.
- ② ADJUSTABLE ARM REST
- ③ REGULATING DEVICE FOR SEAT ANGLE
- ④ LOCKABLE TOP GLIDE PLATE
- ⑤ HEIGHT RELEASE HANDLE (Not included on
the Standard model Art.No.6140)
- ⑥ LOCKABLE ARM FOR SWING
- ⑦ TIGHTENING OF TELESCOPIC COLUMN
(not included on Standard mod.Art.Nr.6101)
- ⑧ LOCKABLE ARM FOR FOOT REST
- ⑨ TELESCOPE COLUMN (Constant/fixed height on
standard model Art.Nr.6140)

A strong and level foundation is required to secure the installation of the base. It may occur that during storage or transport that the telescope column ⑨ fastens in the lower position. This can easily be adjusted by fastening the lockable arm for swing ⑥, lift up the release handle ⑤ at the same time pull up the chair.

BRUKER MANUAL/USERS MANUAL NS 800 Office Standard/Comfort



A/S SØRLANDETS ALUMINIUMPRODUKTER
Postboks 7005, 4674 Kristiansand NORWAY
Tlf.+47 38 18 52 00 Fax.+47 38 18 20 86
e-mail:sale@norsap.no
Internet: www.norsap.no

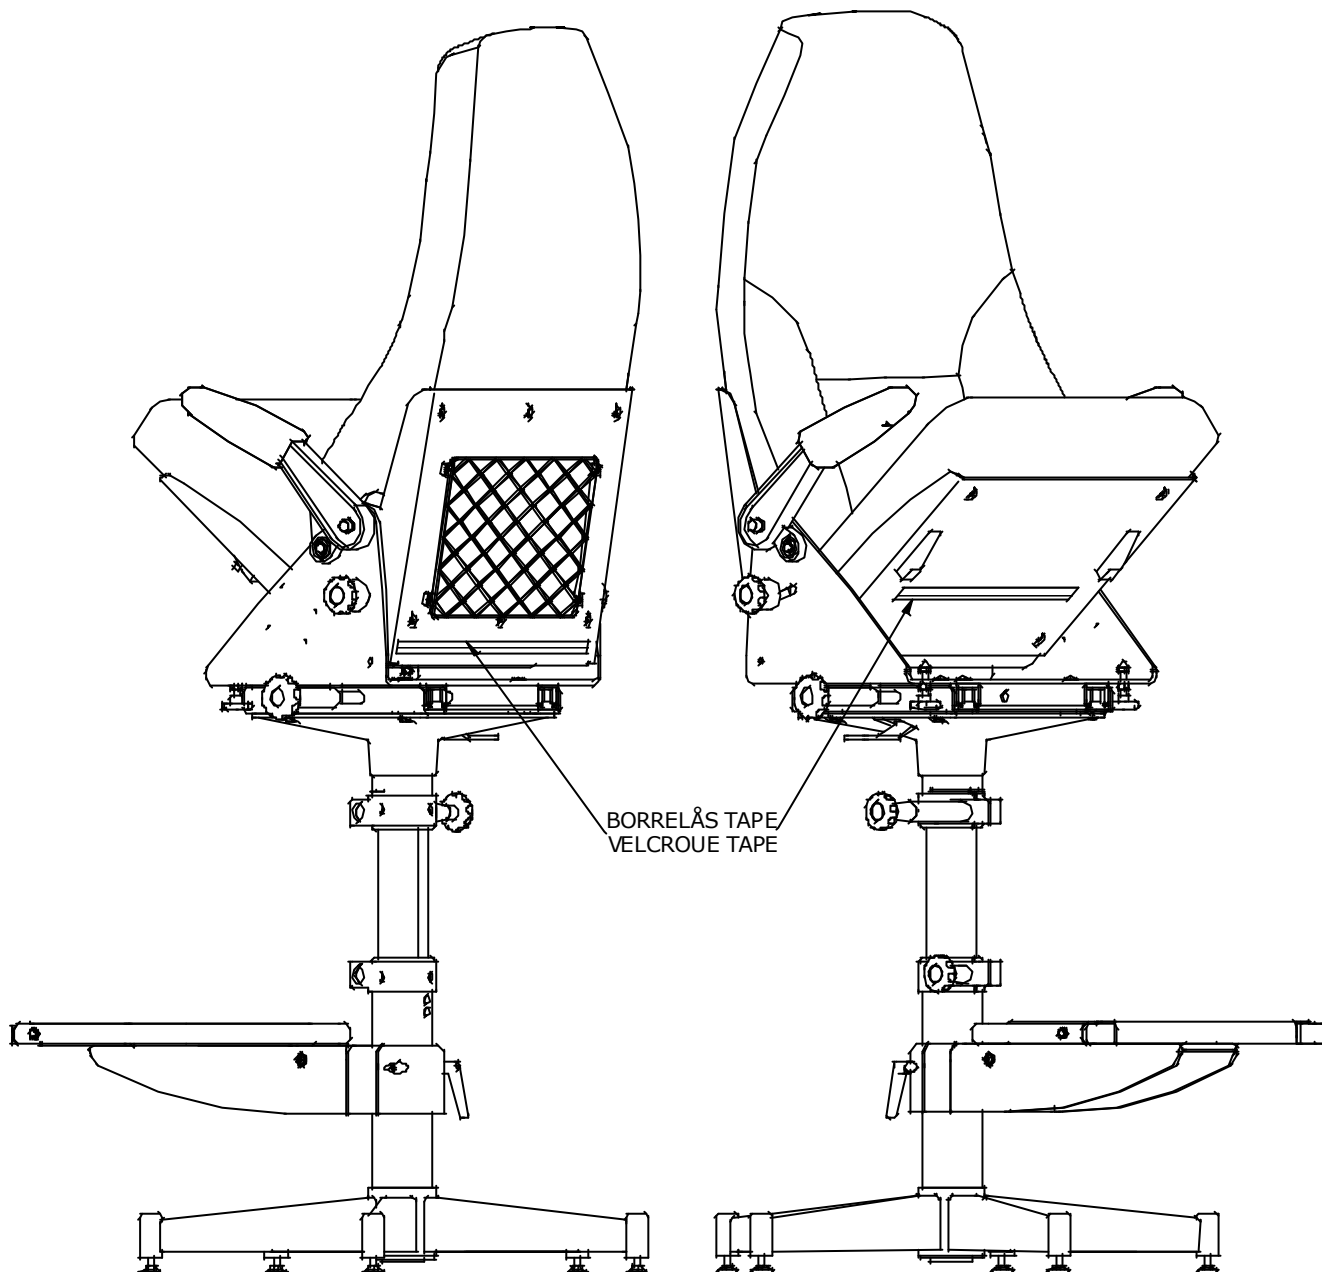

FESTE FOR SETETREKK:

For å sikre setetrekket, settes borrelås nederst på ryggen og under setet som illustrert ovenfor.

Art.nr.6281 Setetrekk i stoff.
Art.nr.6282 Setetrekk i vannavstøtende.

SECURING SEAT COVER:

To secure seat cover, place velcroue tape on the lower back rest and underneath the seat as illustrated above.

Art.no.6281 Seat cover in fabric.
Art.no.6282 Seat cover in water repellent.

Title

SECURING SEAT COVER
Nor Sap 800 CHAIR

FESTE FOR SETETREKK TIL
Nor Sap 800 STOL



A.S. SØRLANDETS ALUMINIUMPRODUKTER

Postboks 7005, 4674 Kristiansand NORWAY
Tlf: +47 38 18 52 00 Fax: +47 38 18 20 86
e-mail: sale@norsap.no
Internett: www.norsap.no

Filename:

S:\Tekinfo\NS 800 Office BM\61-30-40-50-03.dft

Date

06.08.02.

Manufacture

Pleie og vedlikehold av lær

De fleste lærkvaliteter har fått en eller annen form for overflatebeskyttelse. Når så møblene blir tatt i bruk, tilfører man fett fra for eksempel hender og nakke. Dersom man ikke regelmessig rengjør og beskytter materialet på nytt, løser kroppsfettet langsomt opp all beskyttelse i overflaten. Uten slik beskyttelse trenger fett inn i læret og danner store, mørke fettflekker eller forårsaker avfarging. Rens med Soft Cleaner helst månedlig, bruk Leather Protection Cream 2-4 ganger pr. år. Vær nøye med regelmessig rengjøring og beskyttelse. Det er Du som bestemmer hvor lenge møbelet skal vare og hvor lenge den skal beholde sin eleganse.

- Beskytte læret mot direkte sollys over lengre tid.
- Varmekilde må ikke stå nærmere en 20-30 cm fra møbelet.
- Fjern støv og smuss fra læret regelmessig med Soft Cleaner en gang i måneden.
- Ta kontakt med oss eller nærmeste møbelhandler for mer rengjøringsmiddel eller rengjøringsdetaljer.

Vår leverandør på rensemiddel er:

Leather Master AS

6220 Straumgjerde
NORWAY
Tlf. +47 70 25 35 50
Fax. +47 70 25 35 58
Internet: leathermaster.no
E-mail: service@leathermaster.no

Care and maintenance of leather

Most leather qualities have originally received one or another type of surface protection treatment. When the furniture is taken in use, grease from hand and neck will be in contact with the leather on a regular basis. Without proper cleaning the leather will over a period of time leave grease spots or discoloration's. To avoid this clean with Soft Cleaner on a regular basis, we advise once a month. Use Leather Protection Cream or a leather cream with impregnation 2-4 times a year. This will protect against spots, increase wear resistance and preserve the leathers softness. By following these instructions you will ensure a long and lasting leather quality.

- Avoid direct sunlight over a longer period of time.
- Do not place a heat source within a distance of 20-30 cm.
- Remove dust or vacuum, use Soft Cleaner once a month.
- Contact us or an authorized leather producer or Furniture Dealer for more cleaning medium or for further cleaning details.

Our supplier of cleaning medium is:

Leather Master AS

6220 Straumgjerde
NORWAY
Tlf. +47 70 25 35 50
Fax. +47 70 25 35 58
Internet: leathermaster.no
E-mail: service@leathermaster.no

A/S Sørlandets Aluminiumprodukter


Postboks 7005, 4674 Kristiansand
Tlf.: +47 38 18 52 00
Fax.: +47 38 18 20 86
email: sale@norsap.no




BES0410X52




R-0012
SEAT FRAME WITH
CUSHIONS

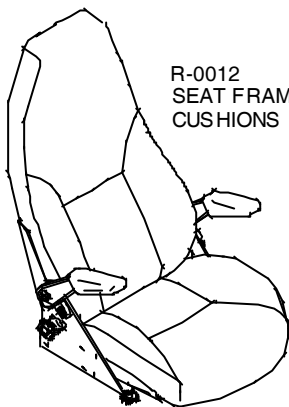


DEL-123
SEAT FRAME NS800

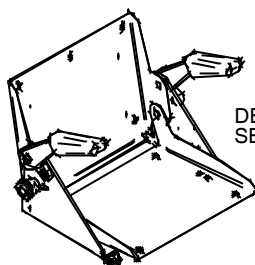


R-0042
SQUARE TOP NS800
with GLIDE RAILS

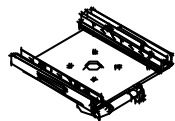


6211
FOOT REST NS800

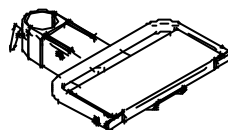

PUTE-025
BACK REST CUSHION

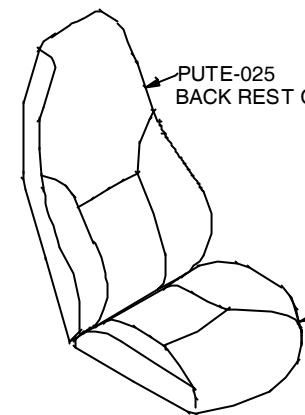


PUTE-024
SEAT CUSHION

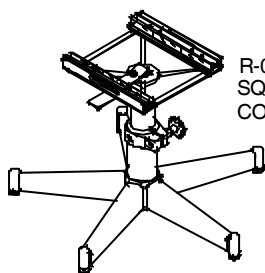


R-0025
SQUARE TOP,
COLUMN AND BASE

Spare Column and Base for:
6150 NS 800 Office
Sitting heights; 520/570mm

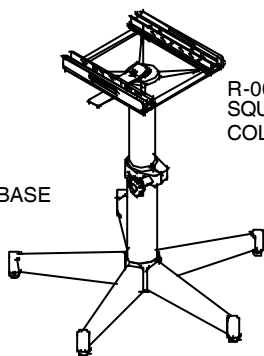

R-0037
SQUARE TOP,
COLUMN AND BASE


Spare Column and Base for:
6130 NS 800 Office Comfort
Sitting heights; 720/890mm

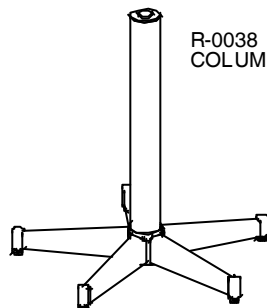

R-0038
COLUMN AND BASE

Spare Column and Base for:
6140 NS 800 Office Standard
Fixed sitting height; 895

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

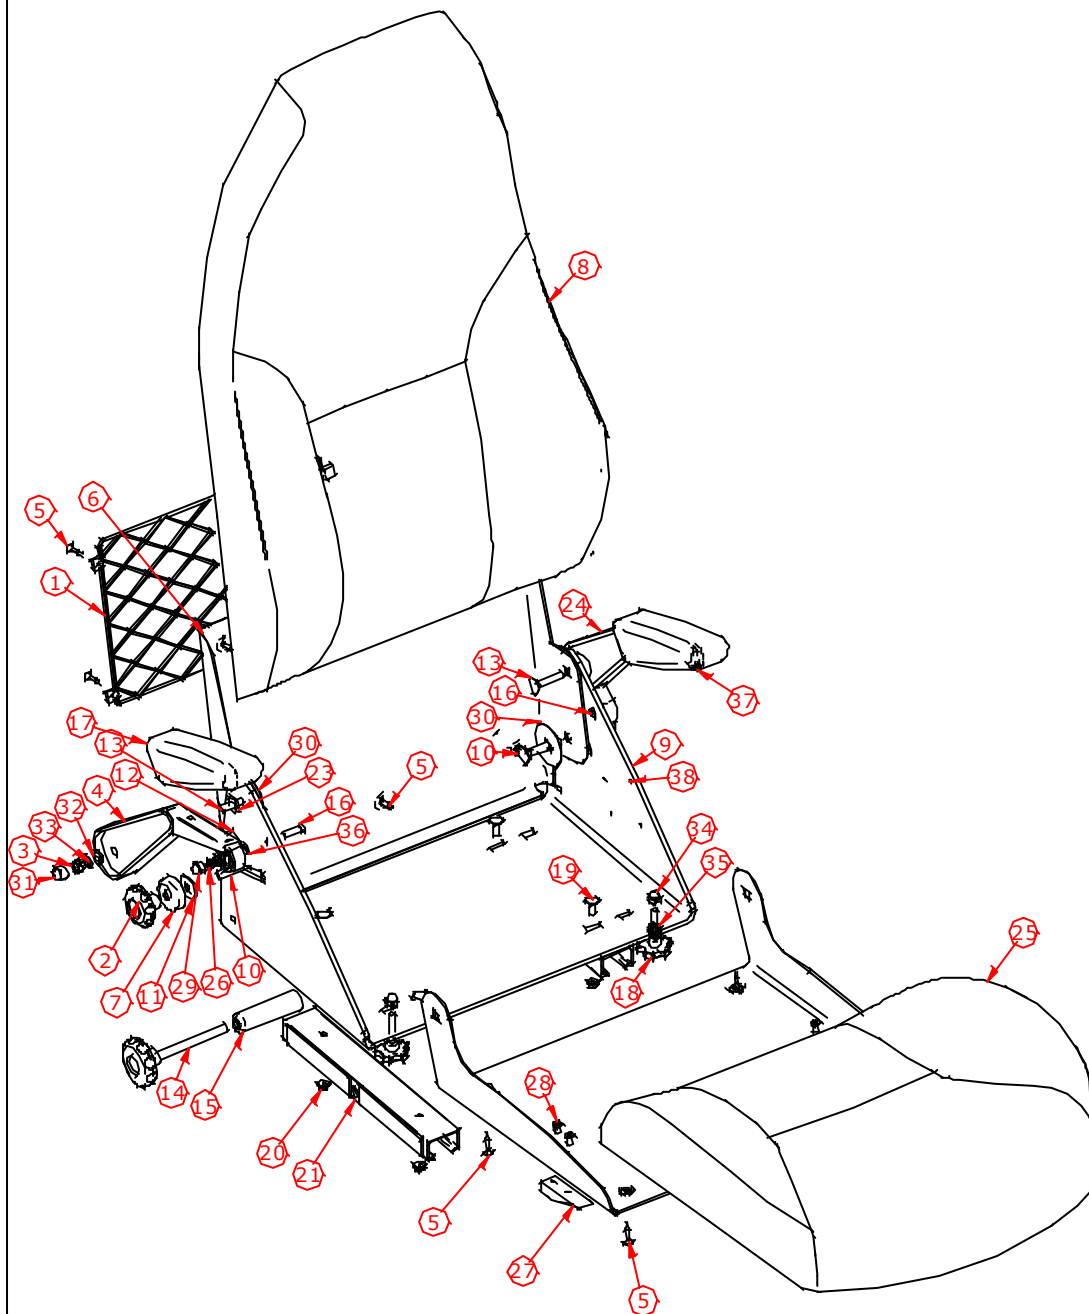

R-0012 SEAT FRAME NS800 PILOT CHAIR Art.No.6101,6200.


Spare part nr.	Item name	Qty.	Pos.Nr.
BES04M10X52	SAFEKEEPING NET BLACK	1	1
RATT-028	HAND REGULATOR ø60 M10	2	2
B462-M8	HEX. NUT NYLOC M8 DIN985	2	3
3845H	ARM REST RIGHT	1	4
B434-4,2X25	COUNTERS.SELF.TAPP.SCR.4,2x25 A4	14	5
SAP-0557	BACK REST PLATE	1	6
MP154	PRESSURE CASING	2	7
PUTE-025	BACK REST NS800	1	8
SAP-0530	SEAT FRAME NS800	1	9
B413-M10X50	ROUND HEAD SQ.NECK CARR.BOLT M10X50	2	10
SAP-0146	FRICTION WASHER	2	11
3847	POSITIONING BLOCK FOR ARMREST	2	12
B413-M8X40	ROUND HEAD SQ.NECK CARR.BOLT M8X40	2	13
RATT-031	HAND REGULATOR M10x100 ø60	2	14
MP160	PRESSURE CASING	2	15
B420-M6X25	HEX.COUNTERS.HEAD SCR. M6X25	2	16
PUTE-012	ARMREST CUSHION	2	17
RATT-010	HEIGHT ADJ.SCREW ø40 M8x40	2	18
B413-M6x20	ROUND HEAD SQ.NECK CARR.BOLT M6X20	4	19
B463-M6	HEX.NUT M6 SELFLOCK DIN6923	4	20
DEL-125	TOP GLIDE RAIL HOLDER FOR NORSAP	2	21
SAP-0585	SEAT PLATE NS 800	1	22
B783-M8	ROUND WASHER FLAT M8 CLEAR PVC	2	23
3845V	ARM REST LEFT	1	24
PUTE-024	SEAT REST NS 800	1	25
B462-M6	NYLON INSERT LOCK NUT M6 DIN985	2	26
SAP-0727	SEAT WEDGE	2	27
B420-M6X12	SOCKET COUNTERS.HEAD SCR.M6X12	4	28
B757-M8S	HEX.NUT PROTECTION CAP M8 BLACK DIN1587	2	29
SAP-0009	ROUND WASHER FLAT ø55x2	6	30
B757-M6S	HEX.NUT PROTECTOR CAP M6 BLACK DIN 1587	2	31
PLA028X12X16	ROUND WASHER w/COLLAR 8x12x16x2 PA66	2	32
B481-M8	ROUND WASHER FLAT M8 DIN125A	2	33
B755-M8N	DOMED HEAD NUT M8 POLYAMID	2	34
B460-M8	HEX.STANDARD NUT M8 DIN934	2	35
B481-M6	ROUND WASHER FLAT M6	4	36
B432-4,8X25	RAISED COUNTERS.SELF TAPP.SCR.4,8x25	2	37
PLA-11D4	COVER PLUG ø4 BLACK	4	38

REV.	REVISION ISSUED FOR:	Date	DRN. Sgn.	Date Chk.	Date Approved	Rev.
A-4	FOR INFORMATION	29.10.02.	Grethe			
A-3	FOR INFORMATION	07.08.02.	Grethe			
A-2	FOR INFORMATION	19.12.01.	Grethe			
A-1	FOR INFORMATION	04.10.00.	Grethe			
Filename: S:\Tekinfo\NS800BM\R-0012.dft						Scale: none
						Mod./Vers. V-02
						Drg.no. R-0012
						Rev. A-4




A.S. SØRLANDETS ALUMINIUMPRODUKTER
 Postboks 7005, 467 4 Kristiansand NORWAY
 Tlf: +47 38 18 52 00 Fax: +47 38 18 20 86
 e-mail: sale@norsap.no Internet: www.norsap.no

Title:
NS 800 SEAT, STANDARD AND COMFORT MODEL ASSEMBLY

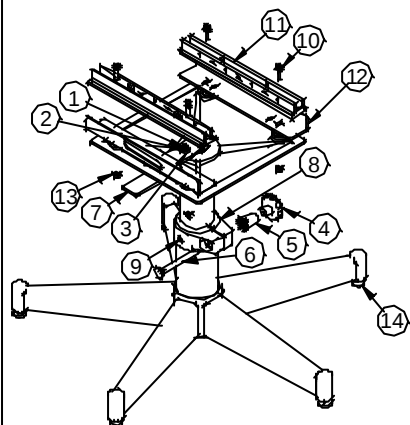


R-0025exp1.cfg

Spare Column and Base for:
6150 NS 800 Office
Sitting heights; 520/570mm

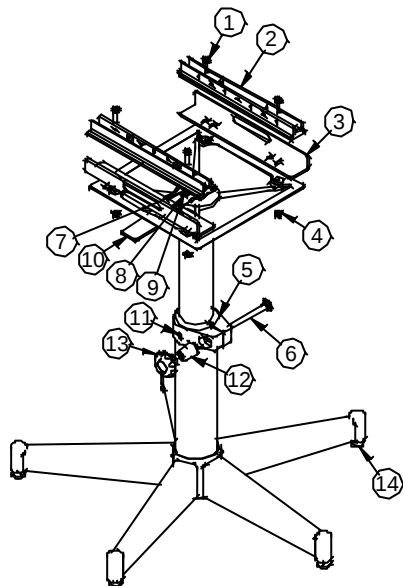

R-0037exp1.cfg

Spare Column and Base for:
6130 NS 800 Office Comfort
Sitting heights; 720/890mm

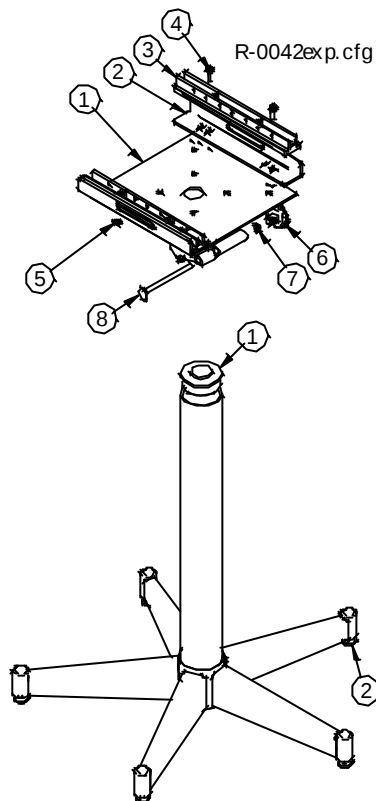

R-0038exp1.cfg

Spare Column and Base for:
6140 NS 800 Office Standard
Fixed sitting height; 895



R-0042 SQUARE TOP NS800 with GLIDE RAILS			
Spare part nr.	Item name	Qty.	Pos.Nr.
DEL-306	SQUARE TOP NS800	1	1
SAP-0551	SIDE PLATE WITH HOLES	2	2
MP156	GLIDE RAIL PVC	2	3
B411-M6x25	HEX.HEAD SCREW M6x25	4	4
B463-M6	HEX.NUT M6 SELFLOCK DIN6923	4	5
RATT-028	HAND REGULATOR M10 ø60 w/SAP LOGO BLACK	1	6
PLA-0301	TUBE SLEEVE w/COLLAR ø10x12x16	1	7
B313-M10X130	ROUND HEAD SQ.NECK CARR.BOLT M10X130	1	8

R-0025 NS800 Office Column Sitting Height:520/570mm			
Spare part nr.	Item name	Qty.	Pos.Nr.
B430-4.8x13	Round Head Phillips Recess 4.8x13	1	1
B480-M5	Round Washer Flat M5	1	2
B783-M6	Round Washer Flat M6 Clear/Soft	1	3
RATT-028	Grip Handle ø60 M10 w/SAP Logo	1	4
MP161	Casing	1	5
B313-M10x100	Round Head Sq.Neck Carr.Bolt M10x100	1	6
SAP-0807	Release Handle	1	7
MP122S	HR Lining w/Collar and Split	1	8
POP-009	Blind Rivet 4.8x14.5	3	9
B411-M6x25	Hex.Head Screw M6x25	4	10
MP156	Glide Rail PVC	2	11
SAP-0551	Side Plate with Holes	2	12
B463-M6	Hex.Nut M6 Selflock DIN6923	4	13

R-0037 NS800 Comfort Office Column Sitting Height:720/890mm			
Spare part nr.	Item name	Qty.	Pos.Nr.
B411-M6x25	Hex.Head Screw M6x25	4	1
MP156	Glide Rail PVC	2	2
SAP-0551	Side Plate with Holes	2	3
B463-M6	Hex.Nut M6 Selflock DIN6923	4	4
MP122S	HR Lining w/Collar and Split	1	5
B313-M10x100	Round Head Sq.Neck Carr.Bolt M10x100	1	6
B430-4.8x13	Round Head Phillips Recess 4.8x13	1	7
B480-M5	Round Washer Flat M5	1	8
B783-M6	Round Washer Flat M6 Clear/Soft	1	9
SAP-0807	Release Handle	1	10
POP-009	Blind Rivet 4.8x14.5	3	11
MP161	Casing	1	12
RATT-028	Griphandle ø60 M10 w/SAP Logo	1	13
STI-002	Adjustable Foot Sole	5	14

R-0038 NS800 Standard Office Column Fixed sitting Height:895mm			
Spare part nr.	Item name	Qty.	Pos.Nr.
SAP-1581	Flange ø72mm	1	1
STI-002	Adjustable Foot Sole ø30 M8x16	5	2

Date:	Tegn. / Drw.		Kont.r. / Check	Målestokk / Scale:	N/A	 A.S. SØRLANDETS ALUMINIUMPRODUKTER Postboks 7005, 4674 Kristiansand Tlf: 38 18 52 00 Fax: 38 18 20 86 e-mail:sale@norsap.no Internet:www.norsap.no	
	Dato / Date		27.02.03.				
	Sign. / Sign.		GRE				
	Filnavn / File name:		S:\Tekinfo\NS800 Office BM\61-30-40-50-05.dft				Tittel / Title:
					OVERVIEW SUMMARY SPARE COMPONENTS AND ACCESSORIES FOR NS 800 OFFICE CHAIR V-02		
					Tegn.nr. : / Drg.nr. 61-30-40-50-05		
					Rev. A-2		

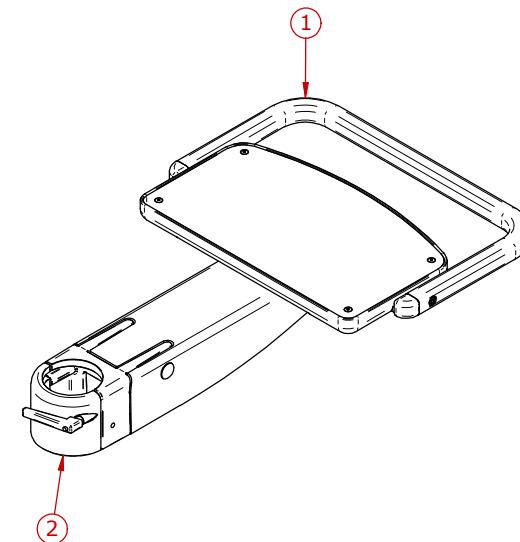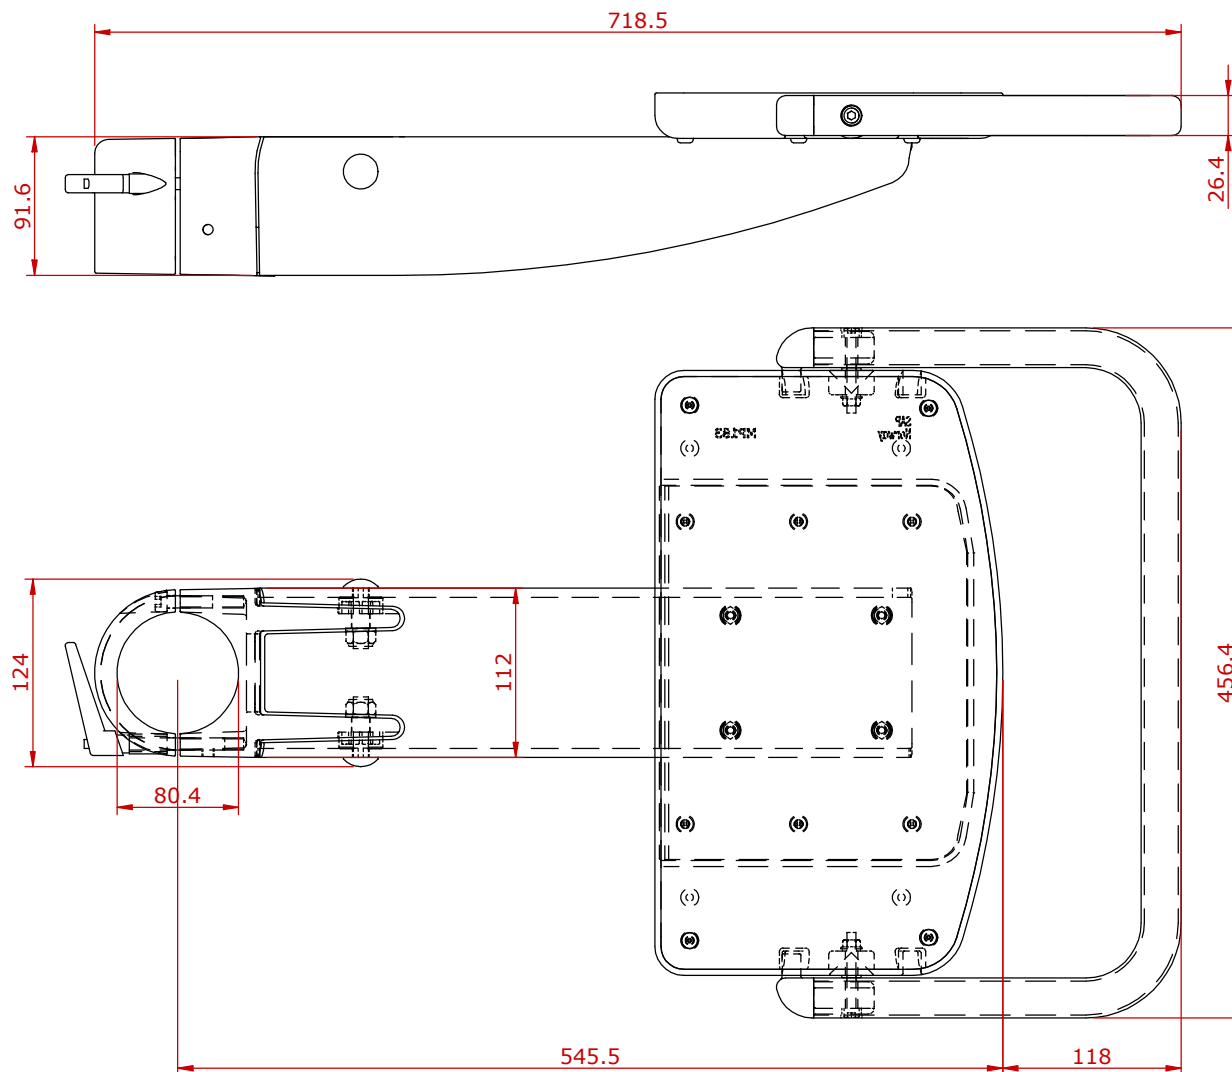


Pos.	Ant.	Vare Navn	Vare Nr.	Rev.
1	1	Fothvilerplate NS 800	DEL-3034	A-01
2	1	Fothviler Feste NS 800	DEL-3036	A-01

Material:						Thickness:	Weight: 0,0 kg
REV:	REVISION ISSUED FOR:	Date:	Author:	EC no.	Approved:	 A.S. SØRLANDETS ALUMINIUMPRODUKTER Mjøvannsveien 35, 4628 Kristiansand, NORWAY Tlf: +47 38 18 52 00 www.sap-as.no Fax: +47 38 18 20 86 e-mail:sales@sap-as.no	
Name:						Foot Rest NS 800	
Navn:						Fothviler NS 800	
Scale: 1:5 A4						Model Filename:	Rev.
Filepath:						6211	A-02

Toleranser for ikke toleransesatte mål: NS-ISO 2768-1 "MIDDELS"

Filepath: \\DC01\Tegninger\Standardprodukter SAP\Komplett\6211.asm

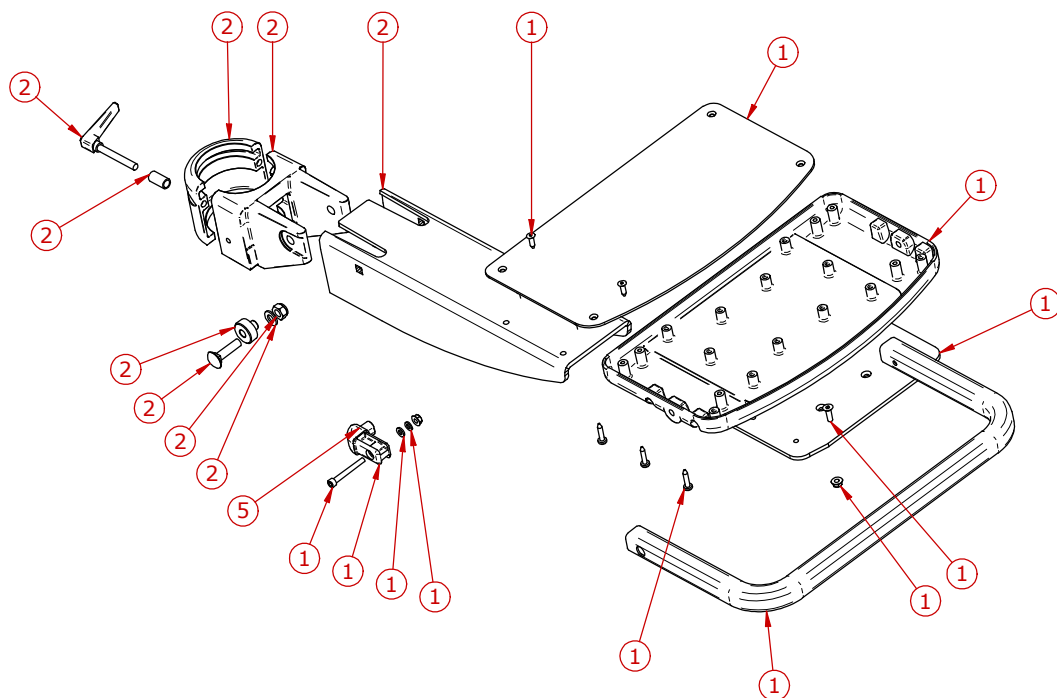

DELE LISTE PÅ ØVERSTE NIVÅ

Pos.	Ant.	Vare Navn	Vare Nr.	Rev.
1	6	PLATESKR.PAN POZ. 5,5x25	B430-5.5x25	
2	1	FOTPLATE PLAST NS 800	MP183	0-01
3	1	HVILEBØYLE	SAP-1588	A-1
4	1	ENDPLUGG	MP184H	0-01
5*	1	ENDEPLUGG	MP184H	0-01
6	2	UNBRACO SYL. M6x50 DIN 912	B415-M6X50	
7	1	Monteringsplate	Sap-5070	0-01
8	4	PLATESKRUE LINSE SENK POS. 5,5x19	B432-5.5X19	
9	6	MUTTER M6 SELFLOCK m/RILLER DIN 6923	B463-M6	
10	2	SKIVE M6 SYREFAST DIN125	B481-M6	
11	2	SKIVE NYLON F/M 6 PA6 DIN125	B781-M6	
12	1	Fothvilerplate	Sap-5071	0-01
13	4	UNBRACO SENK M6x20	B420-M6X20	
14	1	FOTHVILER HENGSELE STØPT 80 mm	SG045	0-03
15	1	FOTHVILER KLEMMRING STØPT 80mm	SG044	0-4
16	1	FOTHVILER FREMRE DEL	SAP-1579	A-02
17	1	HYLSE Ø13mm L=25mm	SAP-0576-25	0-01
18	2	SKIVE FOR HENGSELE STØPT	MP198	PA-1
19	1	STILLBART SPENNGREP M8x63	RATT-018	
20*	1	UNBRACO SYL. M8x30 DIN 912	B415-M8X30	
21	2	LÅSEBOLT M10X40	B413-M10X40	
22	2	MUTTER M10 NYLOC	B462-M10	
23	2	SKIVE LITEN DIAM. M10	B481-M10	

Material:						Thickness:	Weight: 0,0 kg	
REV:	REVISION ISSUED FOR:	Date:	Author:	EC no.	Approved:		A.S. SØRLANDETS ALUMINIUMPRODUKTER Mjøvannsveien 35, 4628 Kristiansand, NORWAY Tlf: +47 38 18 52 00 www.sap-as.no Fax: +47 38 18 20 86 e-mail:sales@sap-as.no	
—	—	—	—	—	—			
—	—	—	—	—	—			
—	—	—	—	—	—			
—	—	—	—	—	—			
—	—	—	—	—	—			
						Name:		
						Foot Rest NS 800		
						Navn:		
						Fothviler NS 800		
A-02	ENDRET UNDERDELER	10.04.2008	KRISTIAN					
A-01	FØRSTE TEGNING	02.04.2008	Kristian					
Filepath:		Scale: 1:5		A4		Model Filename:	Rev.	
\\DC01\Tegninger\Standardprodukter\SAP\Komplett\62111.asm						6211	A-02	

Toleranser for ikke toleransesatte mål: NS-ISO 2768-1 "MIDDELS"

\\DC01\Tegninger\Standardprodukter SAP\Komplett\6211.asm