




User Manual **NorSap 800**

Article no.: 6200,6101,6100,6170 - 25/09/09

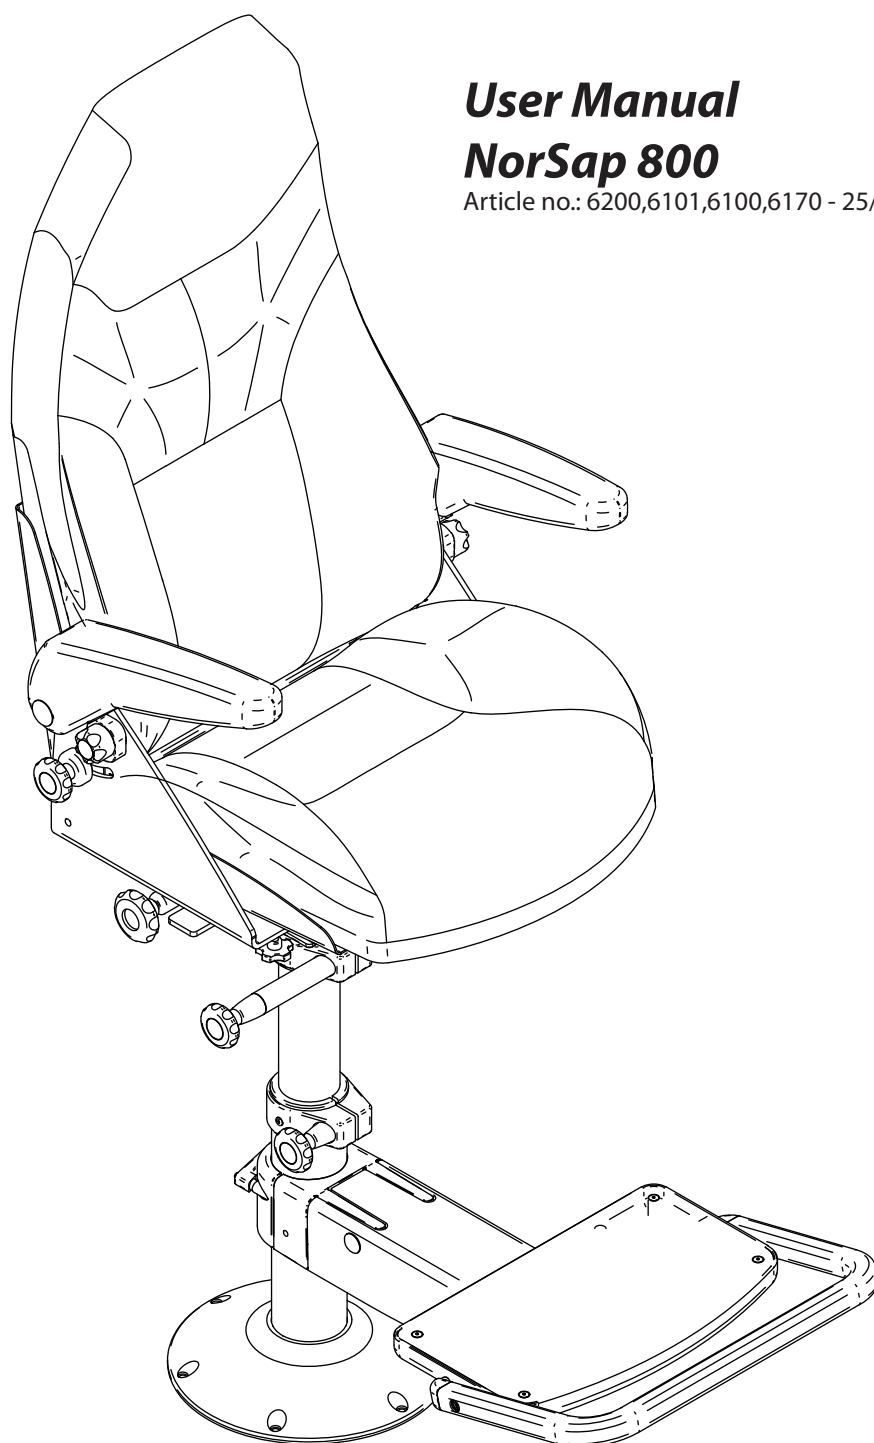

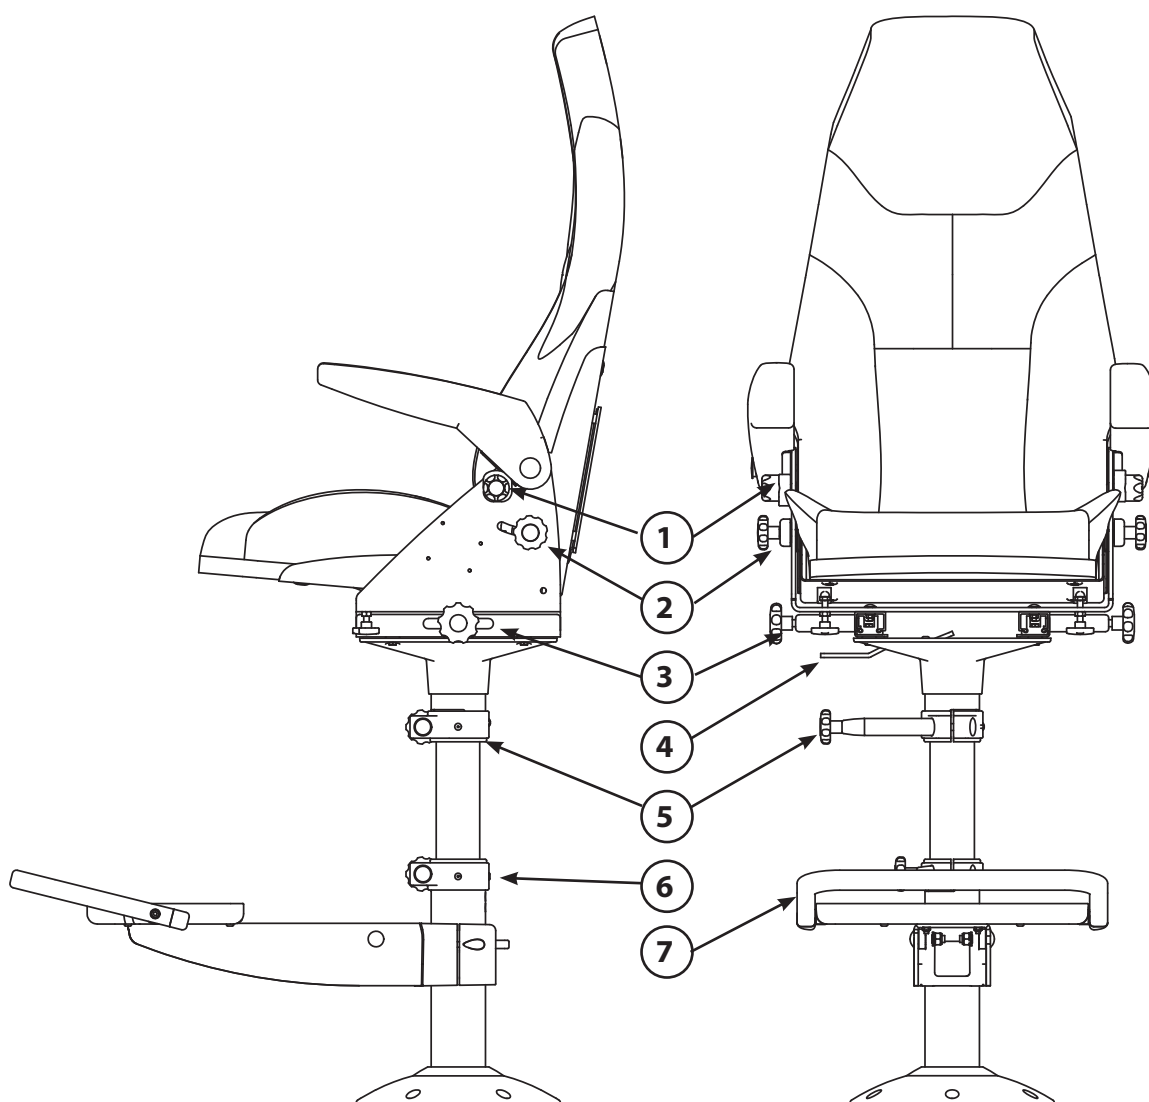

- ① Adjustable arm rest
- ② Adjustable back rest
- ③ Adjustable seat rest
- ④ Adjustable height (n/a to article 6101)
- ⑤ Adjustable twirl
- ⑥ Adjustable turn
- ⑦ Retractable foot loop

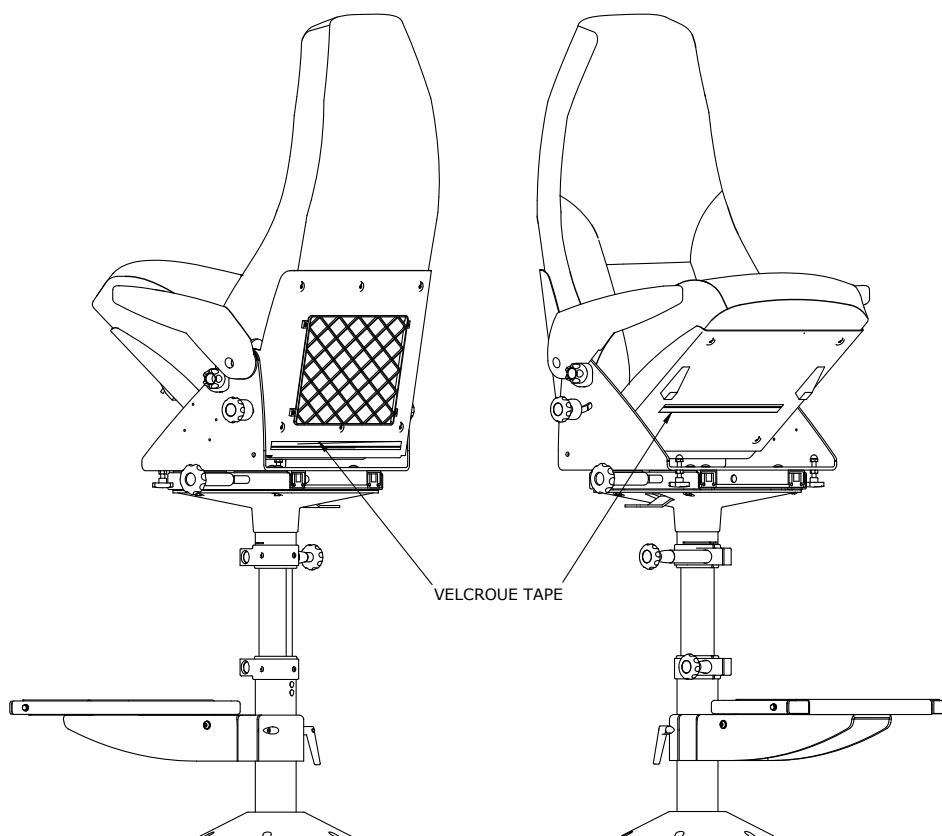

Securing additional seat cover

To secure seat cover, place Velcro tape on the lower back rest and underneath the seat as illustrated above.

Art.no.6281 Seat cover in fabric.

Art.no.6282 Seat cover in water repellent.

Care and maintenance of leather


Most leather qualities have originally received one or another type of surface protection treatment. When the furniture is taken in use, grease from hand and neck will be in contact with the leather on a regular basis. Without proper cleaning the leather will over a period of time leave grease spots or discoloration's. To avoid this clean with Soft Cleaner on a regular basis, we advise once a month. Use Leather Protection Cream or a leather cream with impregnation 2-4 times a year. This will protect against spots, increase wear resistance and preserve the leathers softness. By following these instructions you will ensure a long and lasting leather quality.

- Avoid direct sunlight over a longer period of time.
- Do not place a heat source within a distance of 20-30 cm.
- Remove dust or vacuum, use Soft Cleaner once a month.


Contact us or an authorized leather producer or Furniture Dealer for more cleaning medium or for further cleaning details.

Our supplier of cleaning medium is: **Leather Master AS** - 6220 Straumgjerde - NORWAY -
Tel +47 70 25 35 50 - Fax +47 70 25 35 58 - www.leathermaster.no - service@leathermaster.no

NorSap800 (6200) Part list

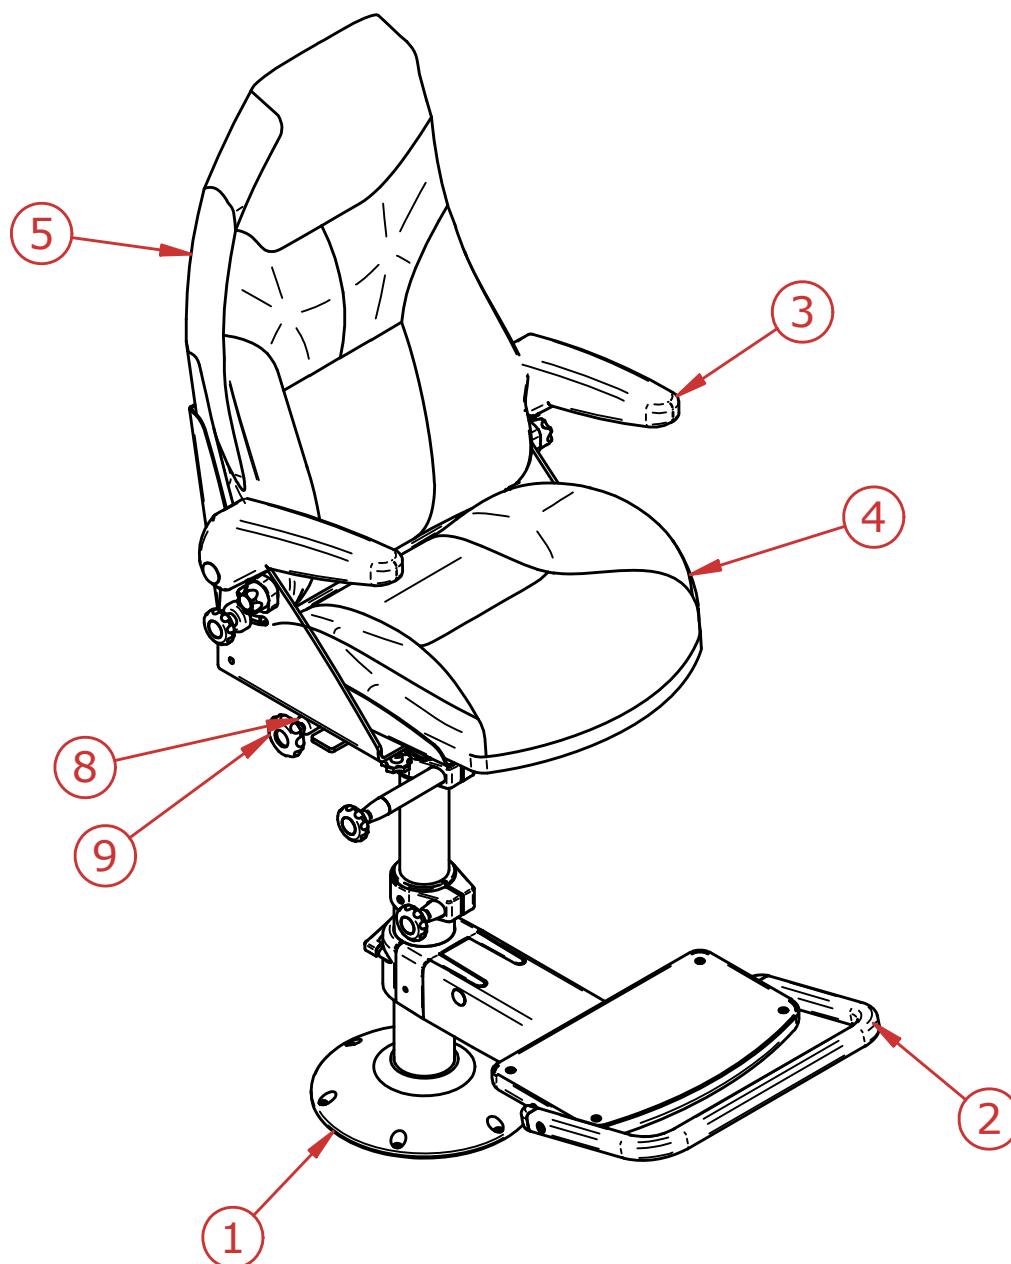


Pos.	Qua.	Description	Article number
1	1	NS 800 Column (Art.no.: 6200)	DEL-437
1	1	NS 800 Column (Art.no.: 6101)	DEL-055
1	1	NS 800 Column (Art.no.: 6170)	DEL-497
2	1	NS 800 Foot rest	6211
3	1	NS 800 Seat frame	DEL-123
4	1	Seating cushion	PUTE-024
5	1	Back rest cushion	PUTE-025
7*	1	Back rest folder holder	BES04M10X52
8	2	Shell	MP160
9	2	Hand wheel	RATT-031

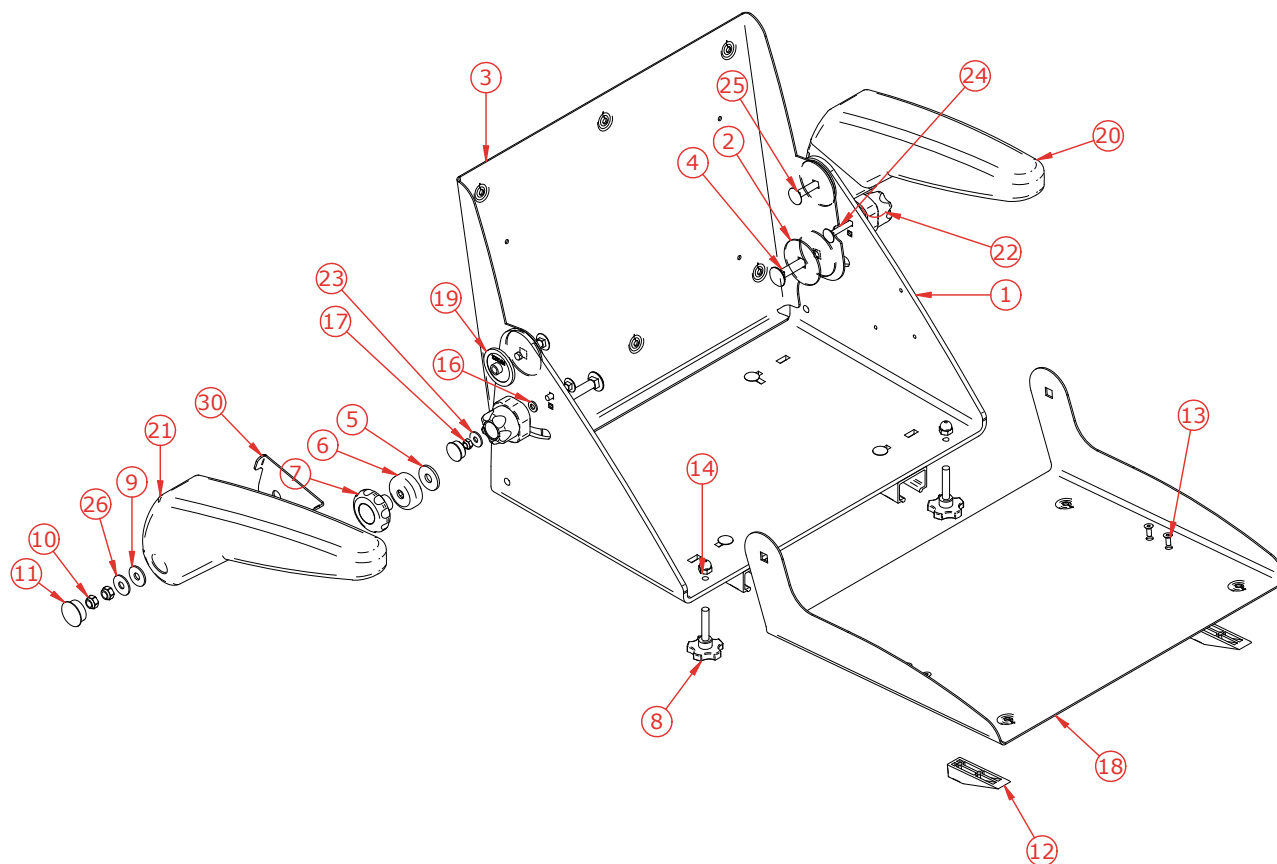

Pos.	Qua.	Article description	Article number
1	1	Seat frame NS800 PL.6mm	SAP-0530
2	6	Washer Ø55X2	SAP-0009
3	1	Back rest plate NS800 2mm	SAP-0577
4	2	Locking bolt M10X50	B413-M10X50
5	2	Friction washer for adj. ring	SAP-0146
6	2	Washer for back rest adjustment	MP154
7	2	Hand wheel ø60	RATT-028
8	2	Hand wheel Ø40	RATT-010
9	2	Washer	B780-M8
10	4	Bolt NYLOC	B462-M8
11	2	Lid Ø25	PLA-0701
12	2	Seat wedge	MP173
13	4	Unbraco countersunk	B420-M5X12
14	2	Nut	B755-M8N
15*	2	Nut	B460-M8
16	2	Washer M6	B481-M6
17	2	Nut	B462-M6
18	1	Seat plate	SAP-0585
19	2	Shell for arm rest	MP222
20	1	NS800 arm rest left	3846V
21	1	NS800 arm rest right	3846H
22	2	Hand wheel for arm rest adjustment	MP179
23	2	Washer	B480-M6
24	2	Locking bolt M6X35	B413-M6X35
25	2	Locking bolt M8X40	B413-M8X40
26	2	Washer	B480-M8
27*	2	Glide rails for NS800	DEL-125
28*	4	Locking bolt M6X20	B413-M6X20
29*	4	Nut M6 Selflock	B463-M6
30	1	Support plate right	SAP-5210H
31*	1	Support plate left	SAP-5210V


DEL-437 (for art.no.: 6200)

Pos.	Qua.	Description	Article Number
1	1	Pedestal	SG034
2	1	Plug	SG010
3	1	Tube $\varnothing 80 \times 4$	SAP-0403-350LS
4	1	Gas spring	GAS-001
5	1	Wedge ring	SG026
6	1	Shell	MP161
7	1	Locking bolt	B313-M10X90
8	1	Hand wheel	RATT-028
9	1	Tube L=460mm	SAP-0406-460
10	1	Tube sleeve	MP122
11	1	Lower tube sleeve	MP150
12	1	Spring stopper	MP125A
13	2	Guiding plug	MP-125B
14	1	Tube sleeve	MP122A
15	3	Pop spike	POP-002
16	1	Nut for gas spring	B361-M10
17	3	Screw	B432-5.5X38
18	1	Square top	DEL-023
19	3	Pop spike	POP-009

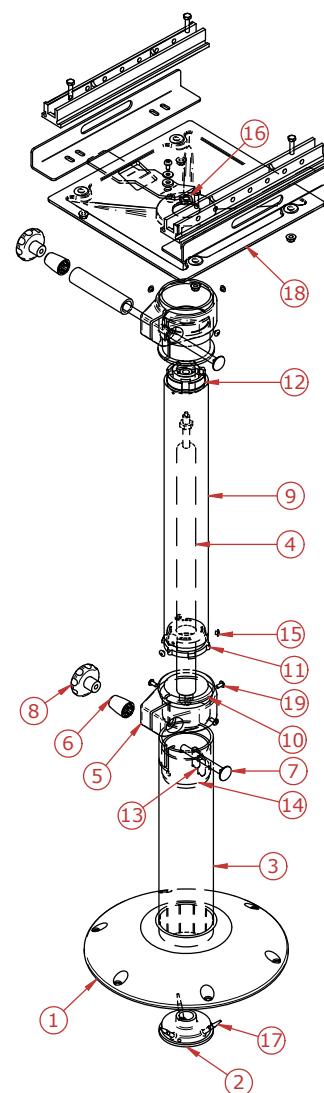


DEL-055 (for art.no.: 6101)

Pos.	Qua.	Description	Article No.:
1	1	Pedestal for art.no.: 6101	SG034
2	1	Pipe $\varnothing 80 \times 4$ KL=700mm	SAP-0403-700
3	1	Square top for art.no.: 6101	DEL-306

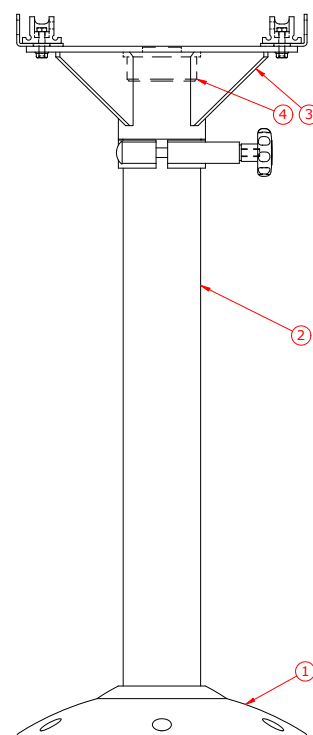


DEL-438 (for art.no.: 6100)

Pos.	Qua.	Description	Article Number
1	1	Pedestal	SG034
2	1	Column ø80	SAP-0403-350LS
3	1	Feeding with sleeve	MP122
4	3	Pop 4,8x14,5	POP-009
5	1	Feeding no sleeve	MP122A
6	1	Clampring	SG026
7	1	Locking Bolt	B313-M10X90
8	1	Shell	MP161
9	1	Hand wheel	RATT-028
10	1	Column w holes	SAP-0404-400
11	1	Adjustment ring	DEL-003
12	1	Square top	SG009
13	2	Angle plate	SAP-0551
14	2	Plate for gliders	SAP-0050
15	2	Gliders PVC	MP156
16	4	Bolts M6X25	B411-M6X25
17	4	Nut M6 Selflock	B463-M6

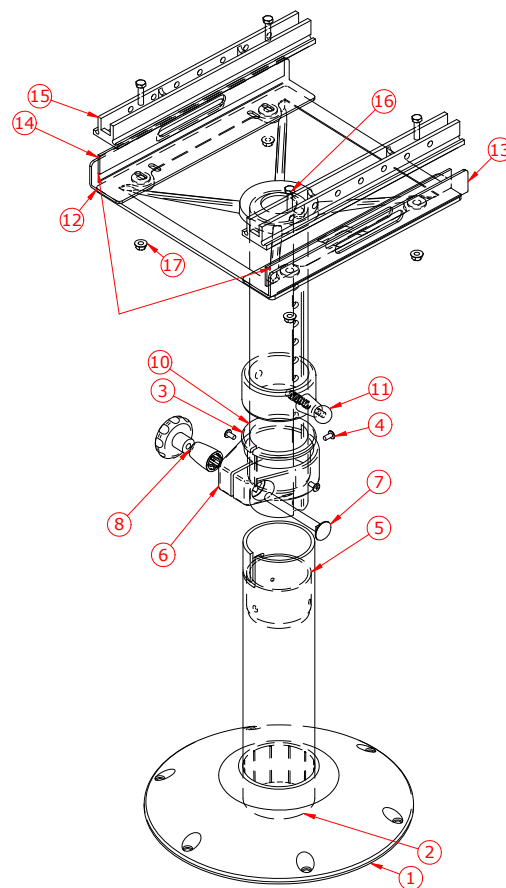


DEL-497 (for art.no.: 6170)

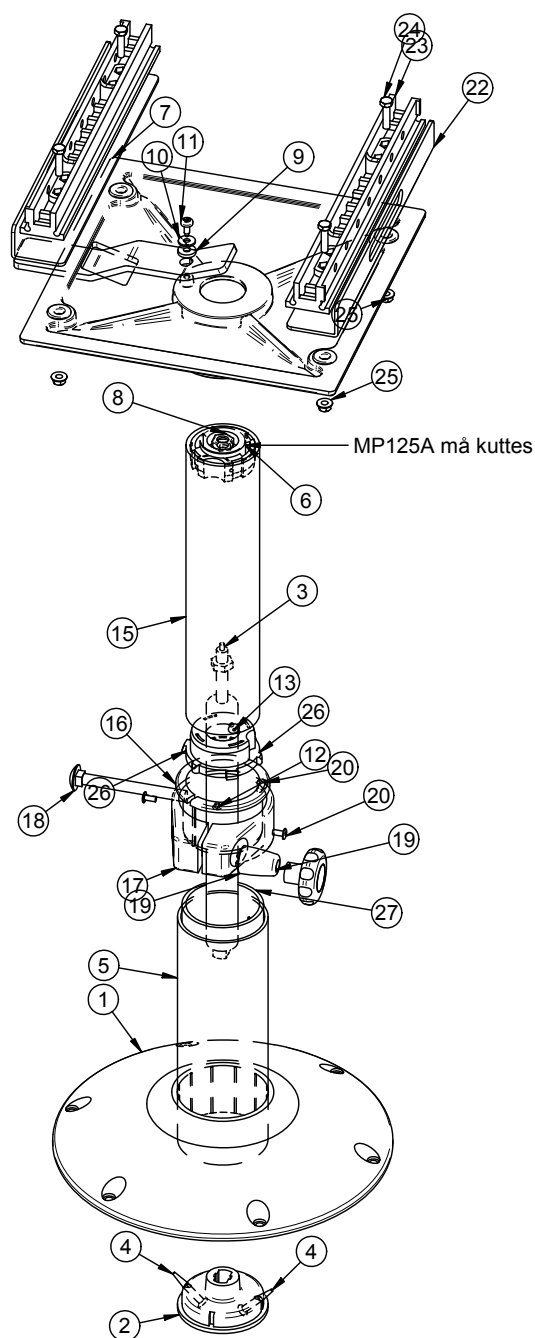

Pos.	Qty.	Description	Art.no.:
1	1	Pedestal	SAP-1714
2	1	Plug	MP166-K
3	1	Gas spring	GAS-002
4	2	Screw 5,5x38	B432-5.5X38
5	1	Ø80 column	SAP-0403-240
6	1	Spring stop	MP125A
7	1	Square top	SG009
8	1	Nutt for gas spring	B361-M10
9	1	Washer M6	B783-M6
10	1	Washer M5	B480-M5
11	1	Screw	B430-4.8x13
12	1	Pop nail 4x9.9	POP-023
13	1	Pop nail 4.8x7	POP-004
14	1	Hand wheel	RATT-028
15	1	Ø65 column	SAP-0402-290
16	1	Plastic coating	MP122
17	1	Clamp ring	SG026
18	1	Locking bolt	B313-M10x100
19	1	Shell	MP161
20	3	Pop nail 4.8x14.5	POP-009
21	1	Hand wheel	SAP-0807
22	2	Angle plate	SAP-0551
23	2	PVC glide rails	MP156
24	4	Screws	B411-M6x25
25	4	Nut Selflock	B463-M6
26	1	Lower coating	MP150
27	1	Coating	MP122A

6211

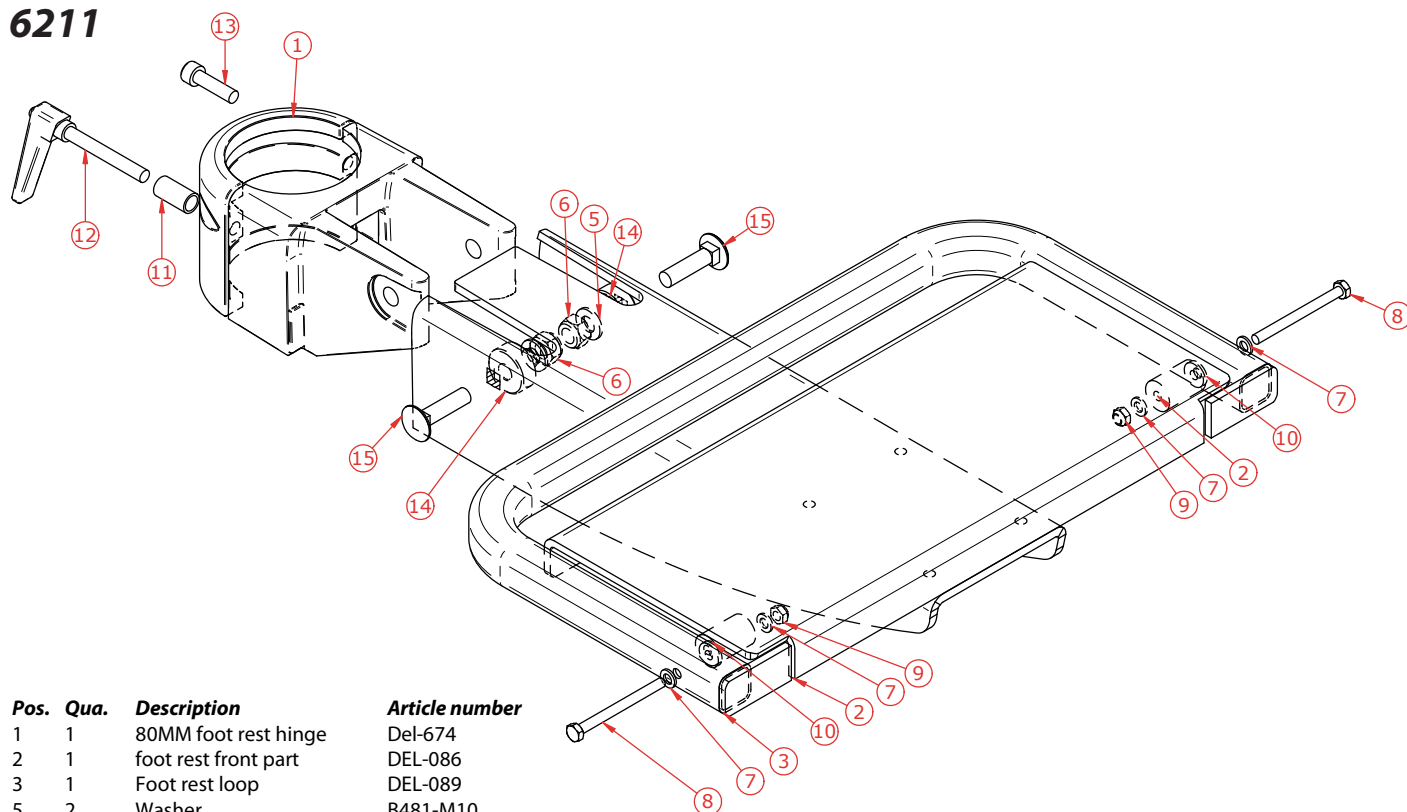



Pos.	Qua.	Description	Article number
1	1	80MM foot rest hinge	Del-674
2	1	foot rest front part	DEL-086
3	1	Foot rest loop	DEL-089
5	2	Washer	B481-M10
6	2	Nut	B462-M10
7	4	Washer	B481-M6
8	2	Screw	B411-M6X70
9	2	Nut Nylock	B462-M6
10	2	Washer	B783-M6
11	1	Shell Ø13mm L=25mm	SAP-0576-25
12	1	Hand wheel	RATT-018
13	1	Unbraco	B415-M8X30
14	2	Washer for hinge	MP198
15	2	Locking bolt	B413-M10X40

Mounting holes measurements



Important

A strong and level foundation is required to secure the installation of the base. It may occur that during storage or transport that the telescope column fastens in the lower position. This can easily be adjusted by fastening the lockable arm for swing, lift up the release handle at the same time pull up the chair.

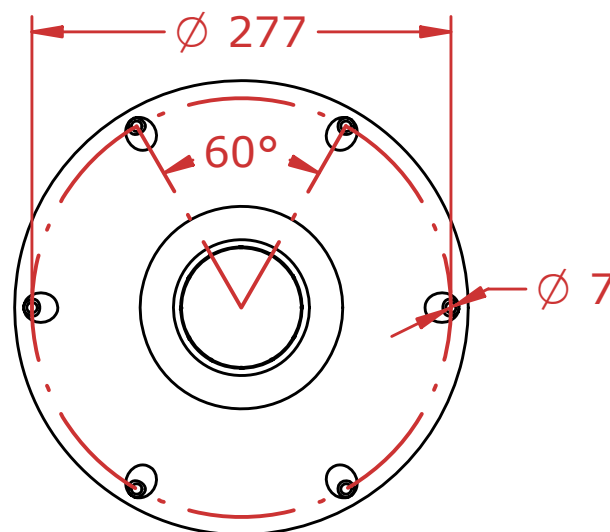


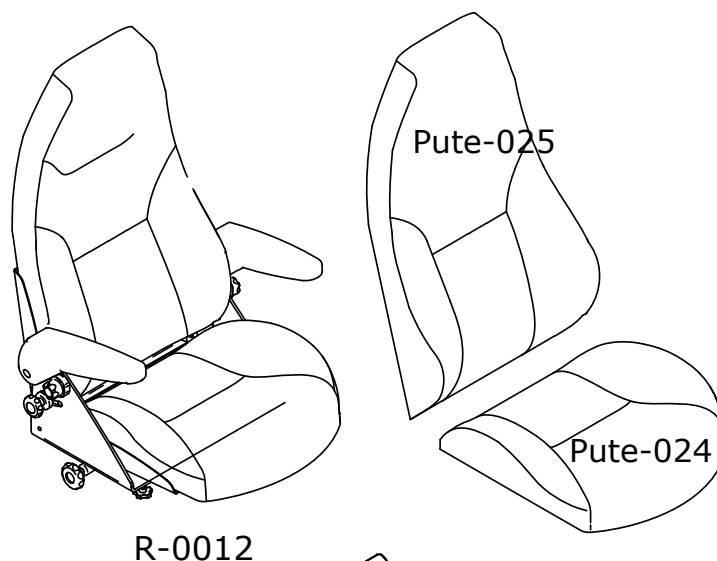

BES0410X52

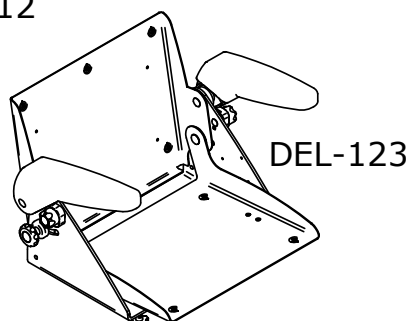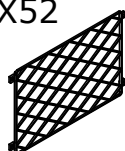


DEL-306

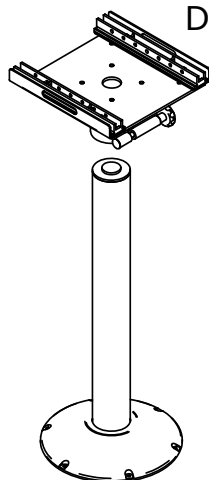


R-0021

DEL-023

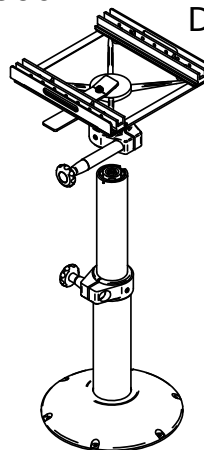

R-0022

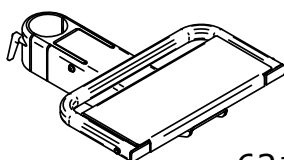

6211